BODY PANEL SEALING AREAS

Be sure to apply body sealer to the body panel joints and door edges (tip of outer panel folded part), etc., to waterproof and rustproof them.

HINT:

1) *Apply degreasing agent to a clean cloth and clean the sealer application areas.*
2) *After removing the applied spot sealer from the sealer application areas using thinner or equivalent, rustproof the areas by applying primer or equivalent. Then apply body sealer.*
3) *If sealer is unnecessarily applied to an area, apply degreasing agent to a clean cloth and clean off the sealer immediately.*

++++++++++	Flat Finishing	————	No Flat Finishing

1. ENGINE COMPARTMENT

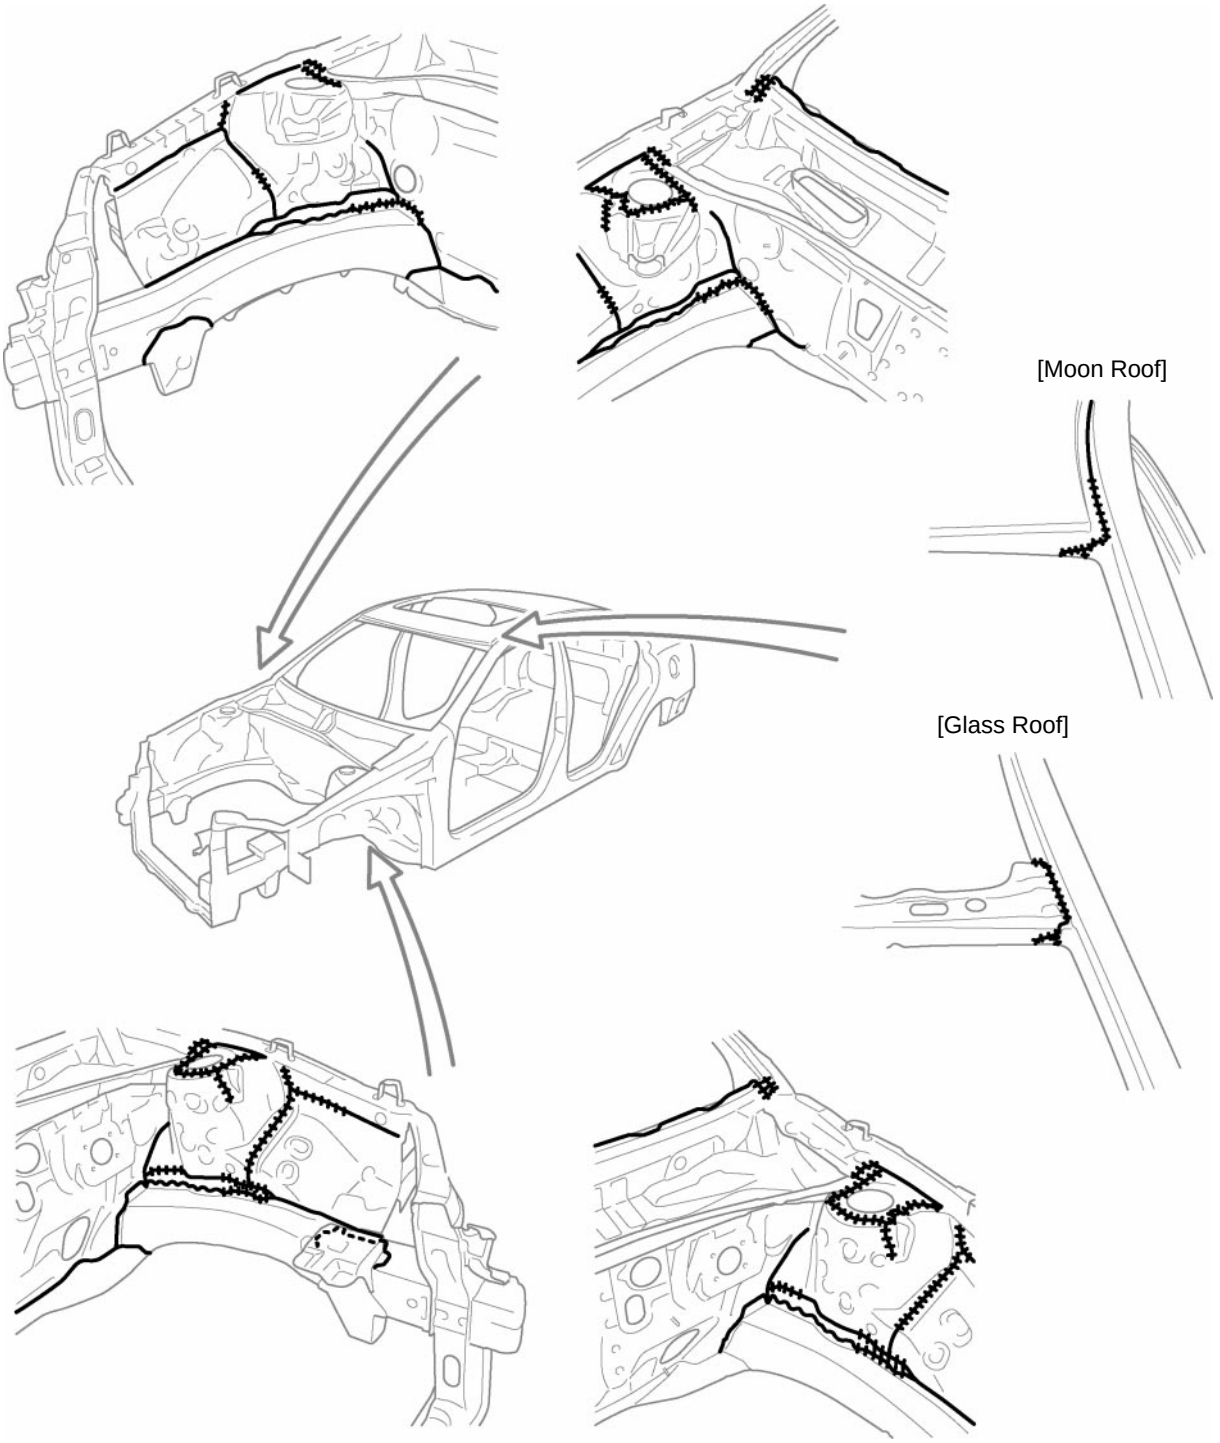

F25851

2. OUTSIDE

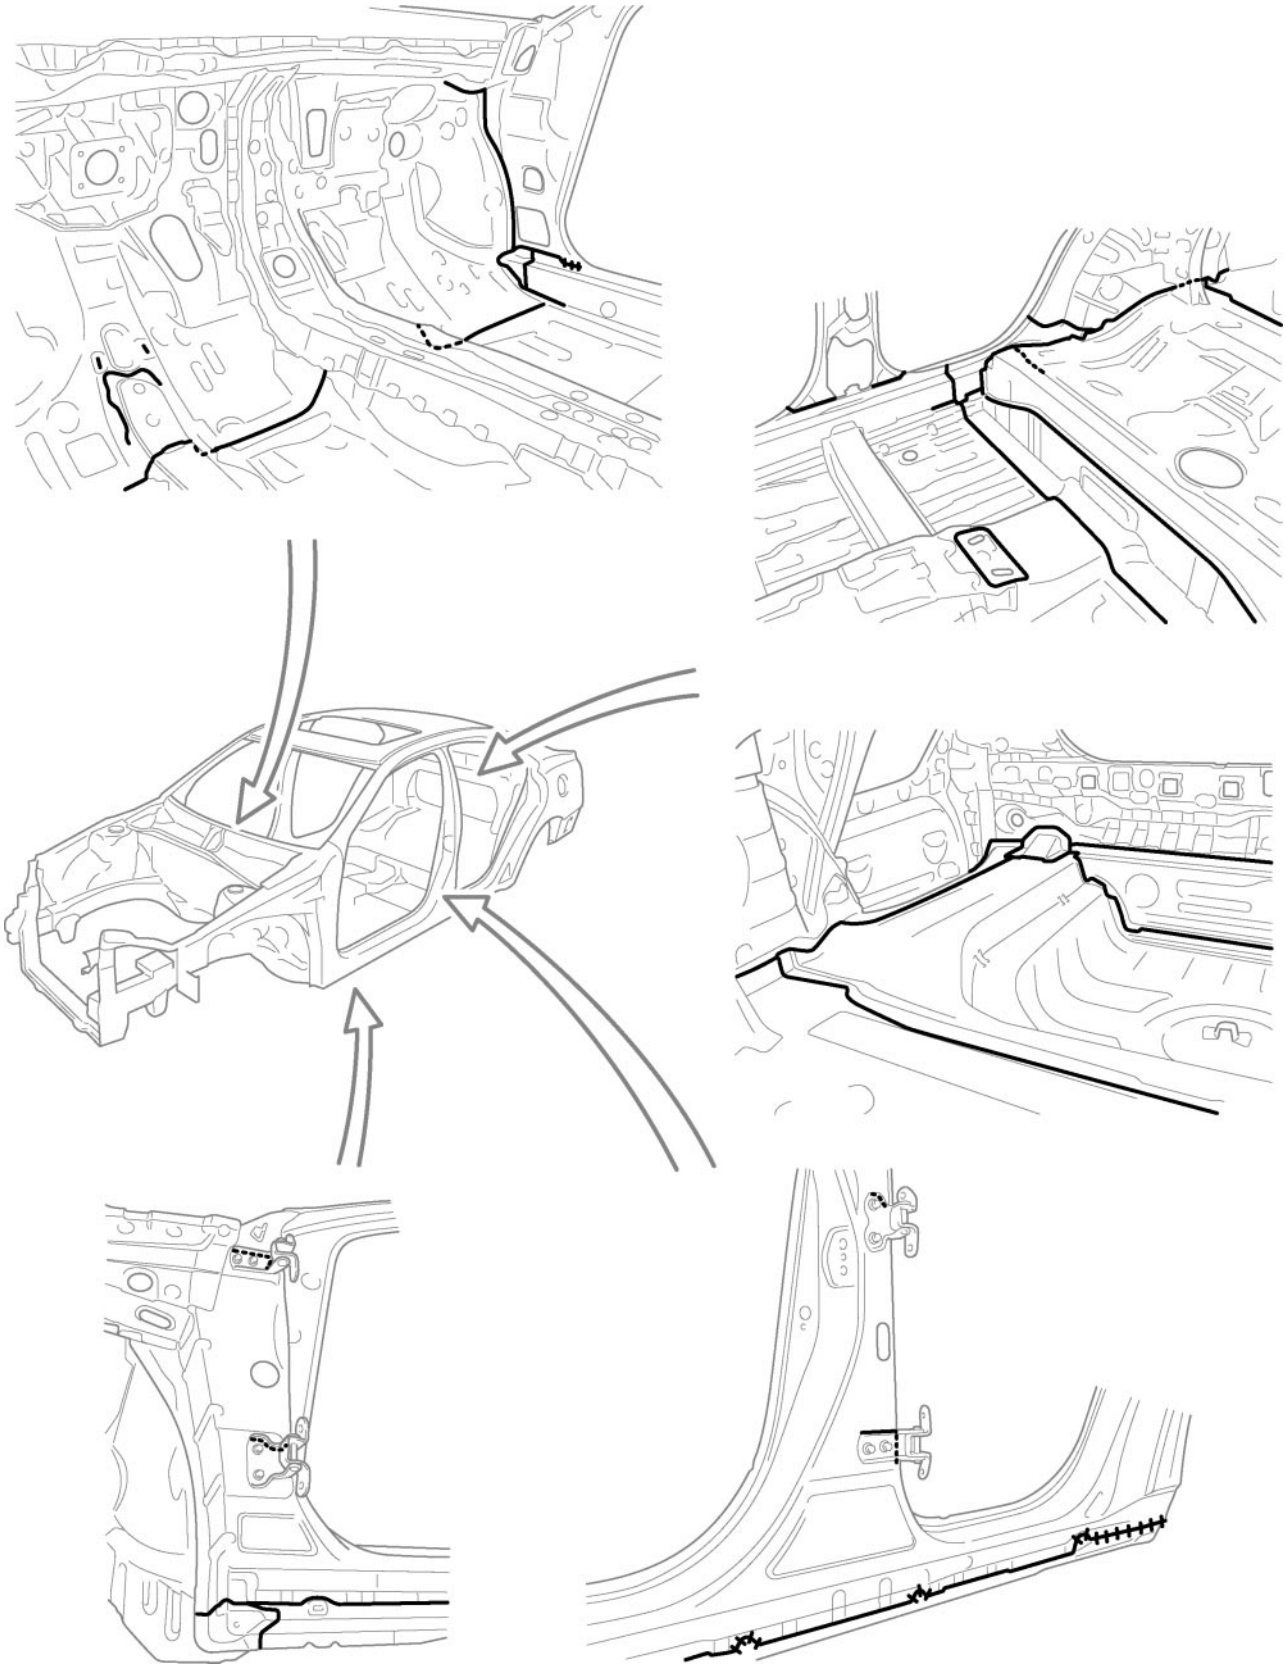

F25852

3. INSIDE

F25853

4. DOOR PARTS

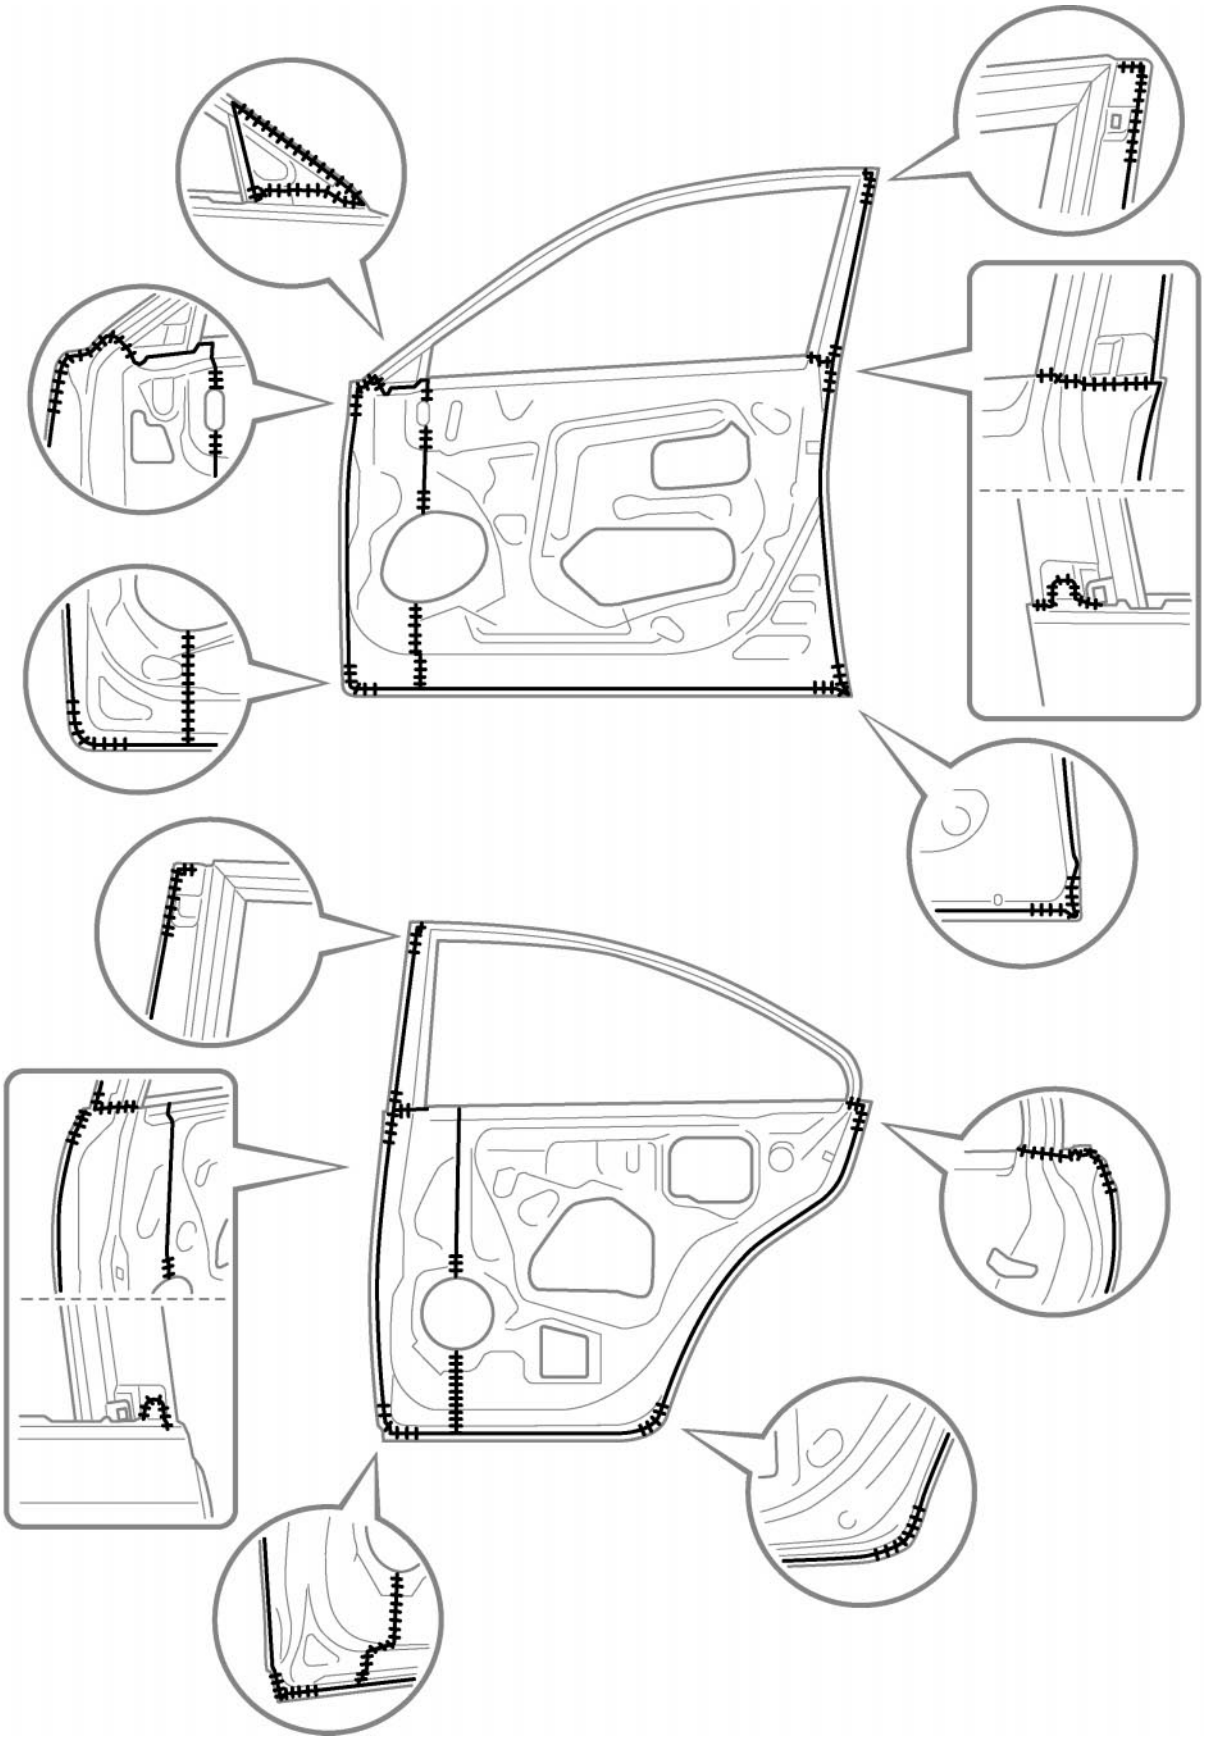

F25854

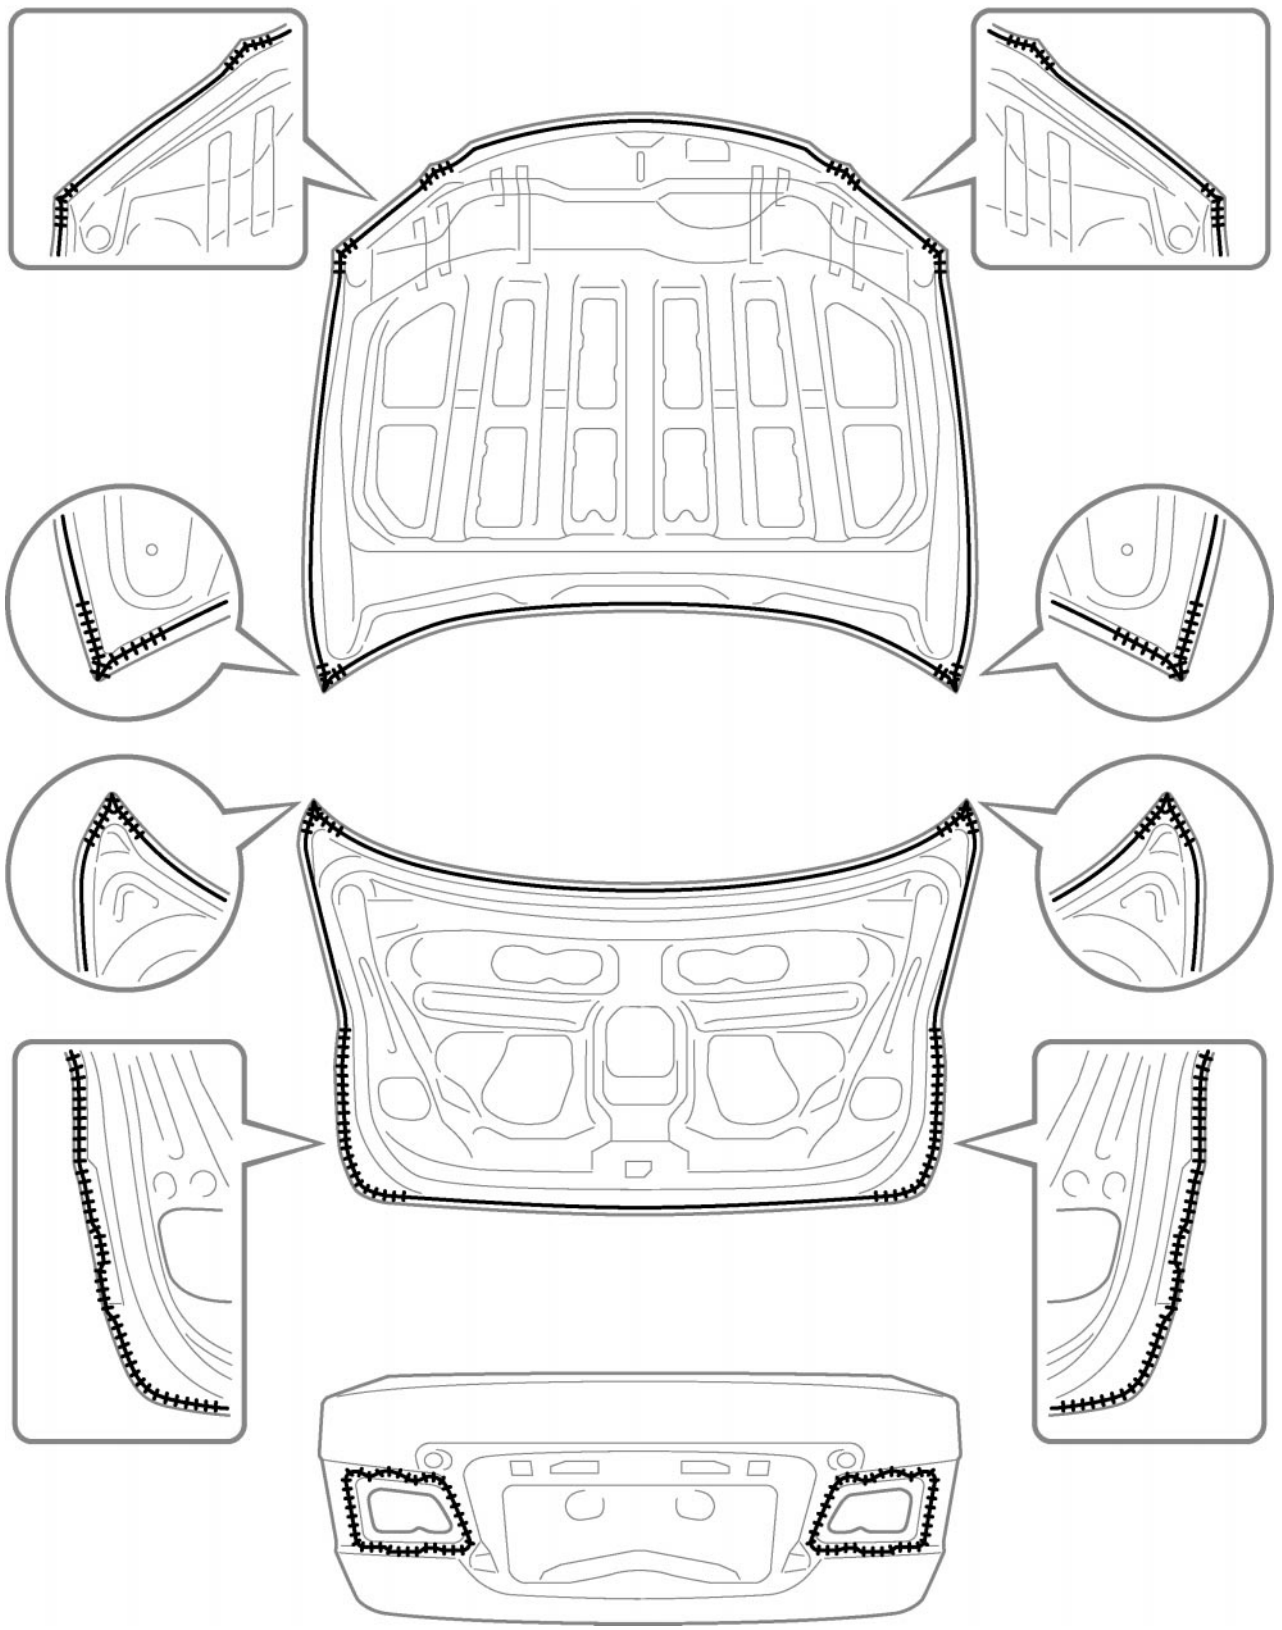

F25855